

127 Village Lane Easley, SC 29642 Ph: (864) 605-0150 Fax: (864) 605-0830 www.tru-flo.com

CA & CS Series LIMIT SWITCH Installation & Operation Manual Page 1 of 1

INSTALLATION

- 1. Attach proper mounting bracket (21) to the switch box housing (1) using four M6x8 socket head cap screws (20) provided.
- 2. Align switch box shaft (4) to top of actuator shaft and engage it.
- 3. Attach bracket to actuator using hardware provided (finger tight only).
- 4. By actuating package the switch and actuator will self align.
- 5. Tighten bracket to top of actuator.

SWITCH ADJUSTMENT (Figure 1)

- 1. Loosen switch box cover screws (18) and remove cover (2).
- Remove indicator screw (19) and remove indicator (17).
 <u>WARNING</u>: Hold indicator (17) tightly when loosening and tightening screw (19). Do not rotate indicator (17) when engaged on retainer (12c), this will damage the splines.
- 3. Rotate actuator clockwise.
- 4. Push down top cam (11b) and turn until switch is activated and then release. Engage cam (11b) back onto the splined retainer (12b). Spring (13) will maintain cam engagement.
- 5. Rotate actuator counter-clockwise.
- 6. Lift up bottom cam (11a) and turn until switch is activated and then release. Engage cam (11a) back onto the splined retainer (12a). Spring (13) will maintain cam engagement.
- 7. Set indicator (17) to match valve position
- 8. Hand grip indicator (17) and tighten screw (19).
- 9. Place cover (2) on switch box and tighten. Take care to ensure that cover gasket seal is properly located in seal groove

ELECTRICAL WIRING (Figures 2 & 3)

- 1. Remove switch box cover (2) and indicator (17). (see switch adjustment sections 1 and 2).
- Remove protection plugs from conduit entries and install conduit or plugs suitable for type of protection required.
 <u>WARNING:</u> To maintain the NEMA 4 rating, the use of proper wiring methods per NEC and local codes is required.
- 3. Engage wires in terminal strip (10) using a small screwdriver (1/8" blade).

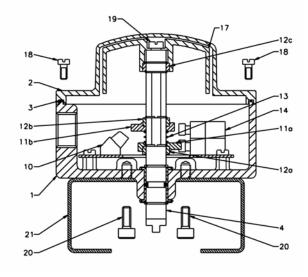


FIGURE 1

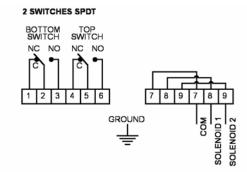


FIGURE 2

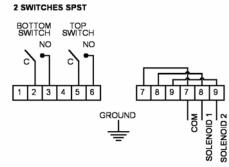


FIGURE 3

Note: Conduit plugs supplied with the switch box are for transit purposes only. To ensure NEMA 4 protection any unused conduit entry must be closed with appropriate conduit plug.